




# Assembly manual

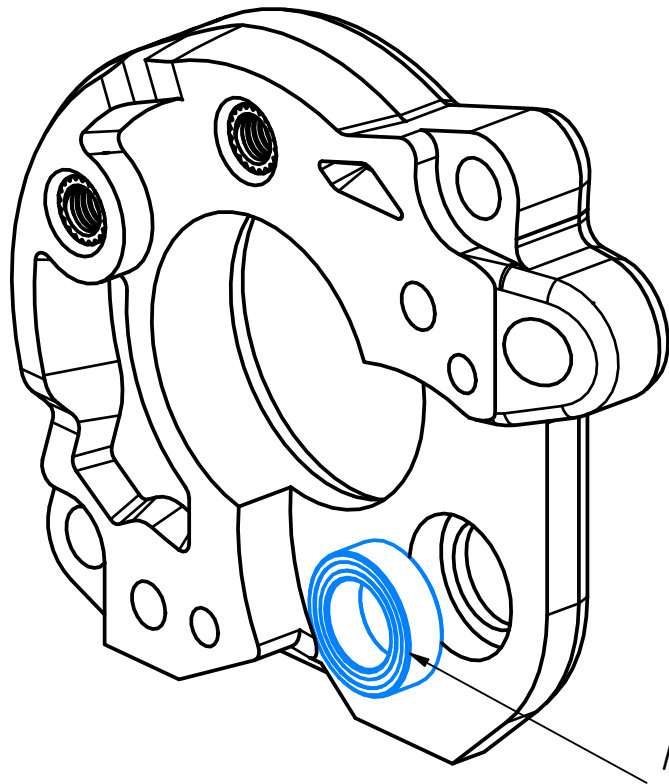


MR85zz 5x8x2.5

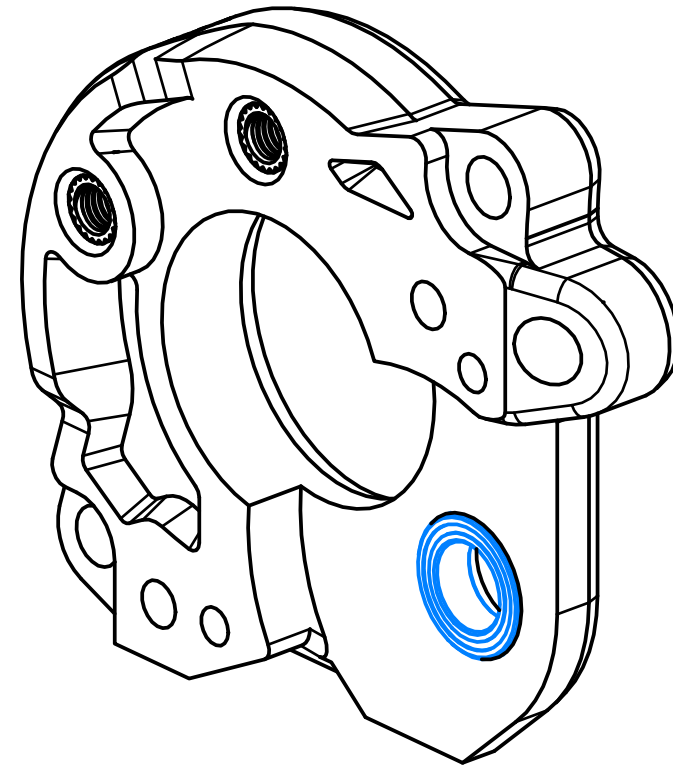


Excessive pressure on the inner ring can damage the bearing.

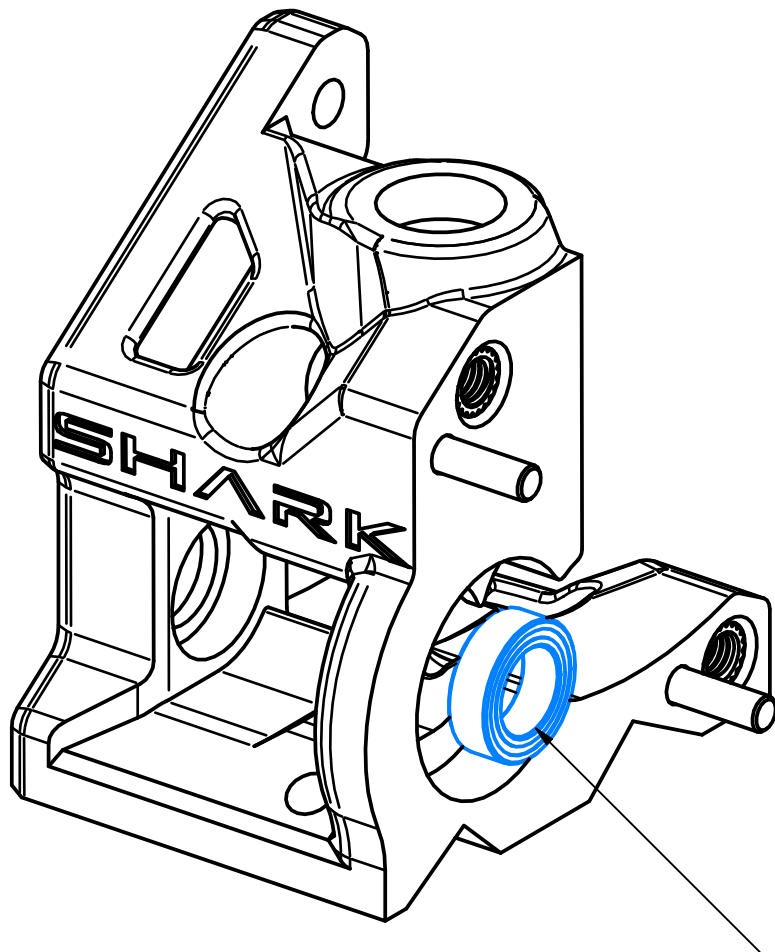




MR85zz 5x8x2.5


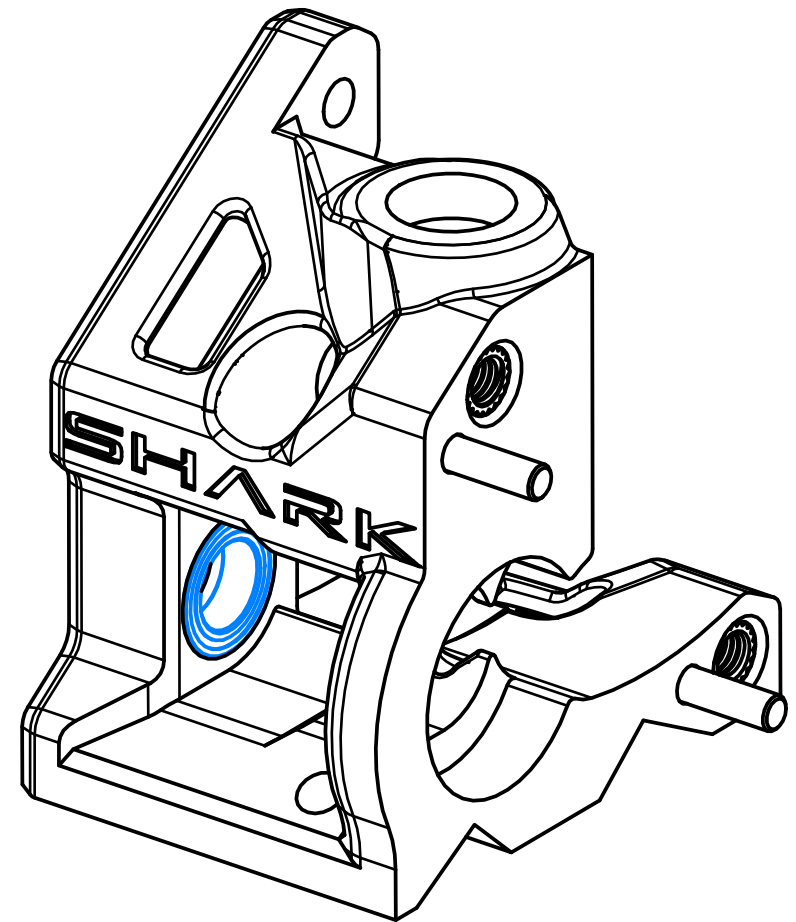




Excessive pressure on the inner ring can damage the bearing.

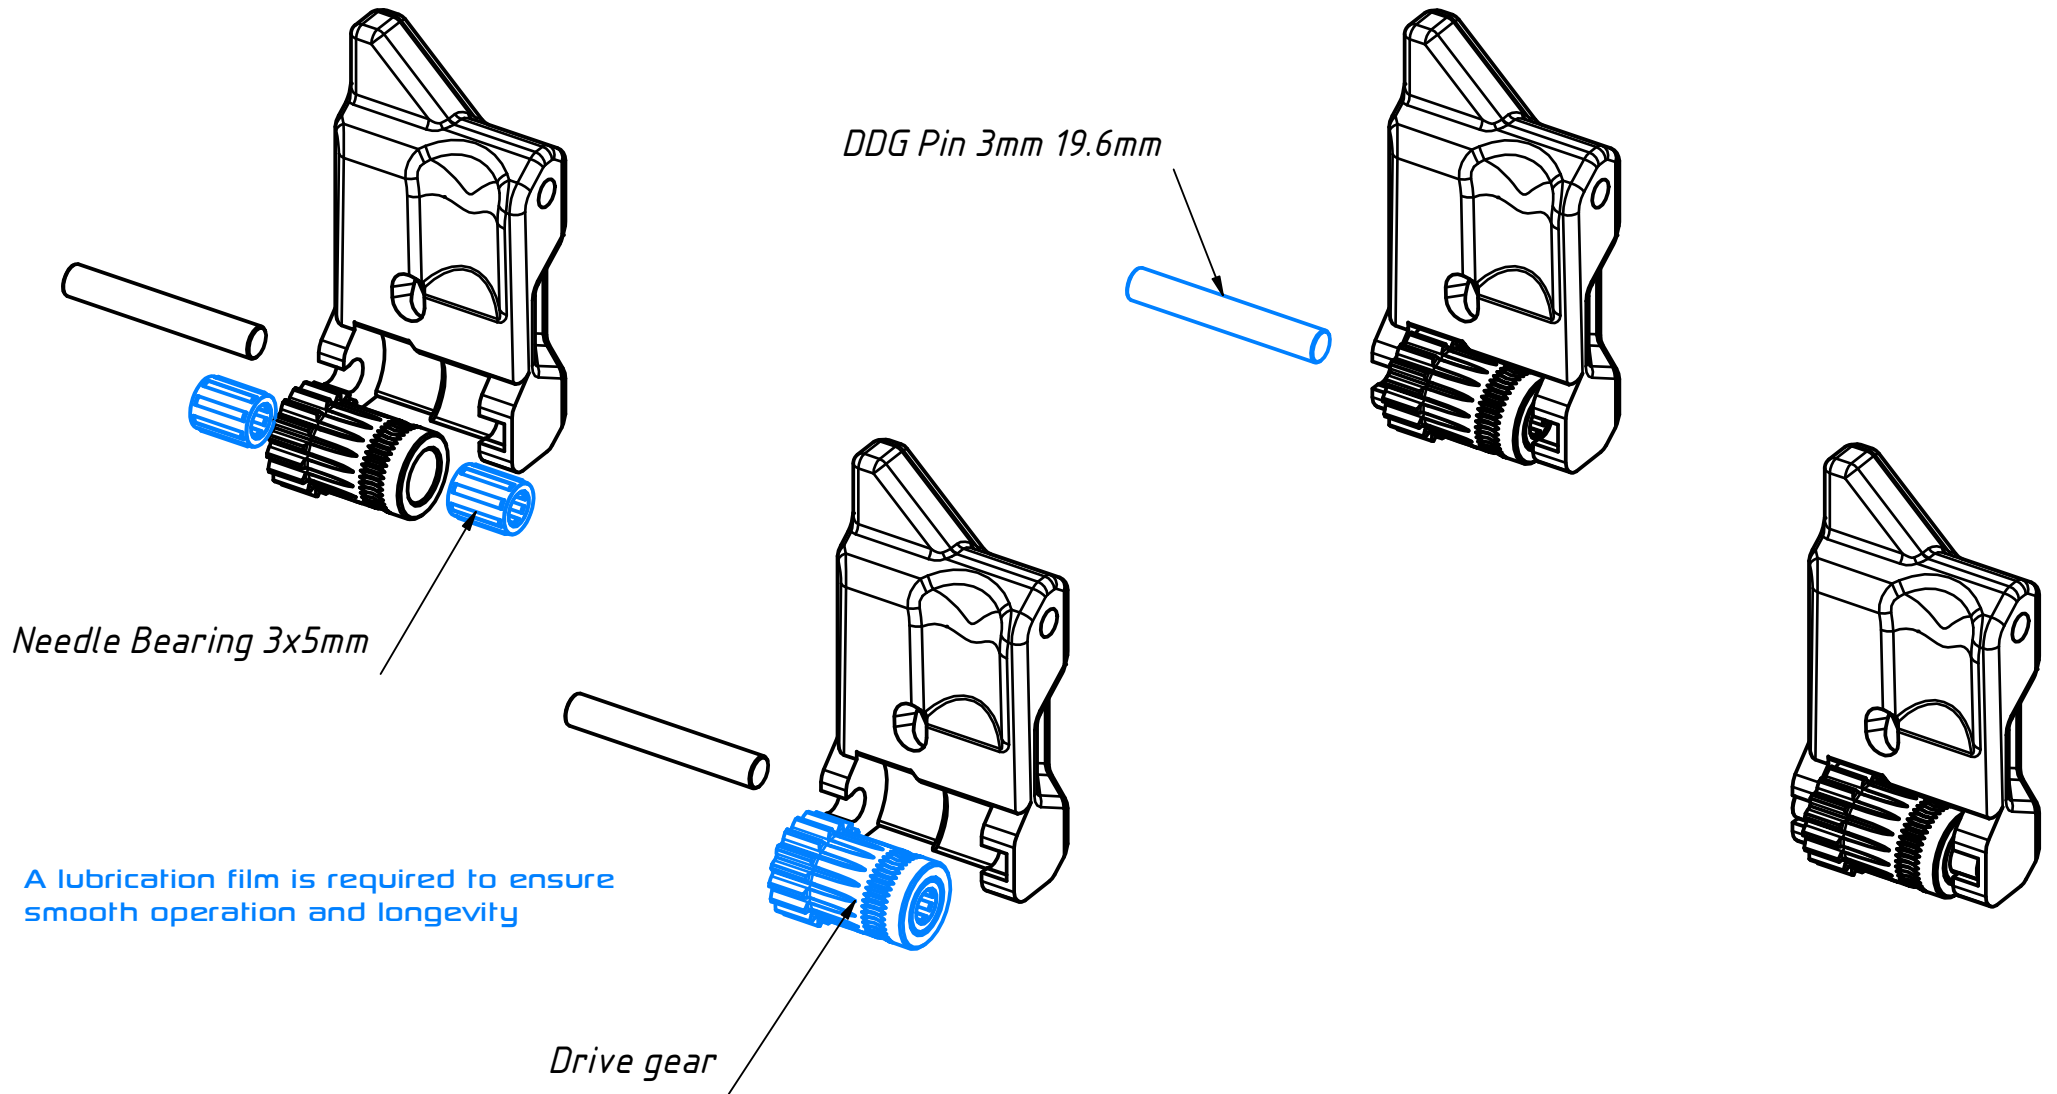

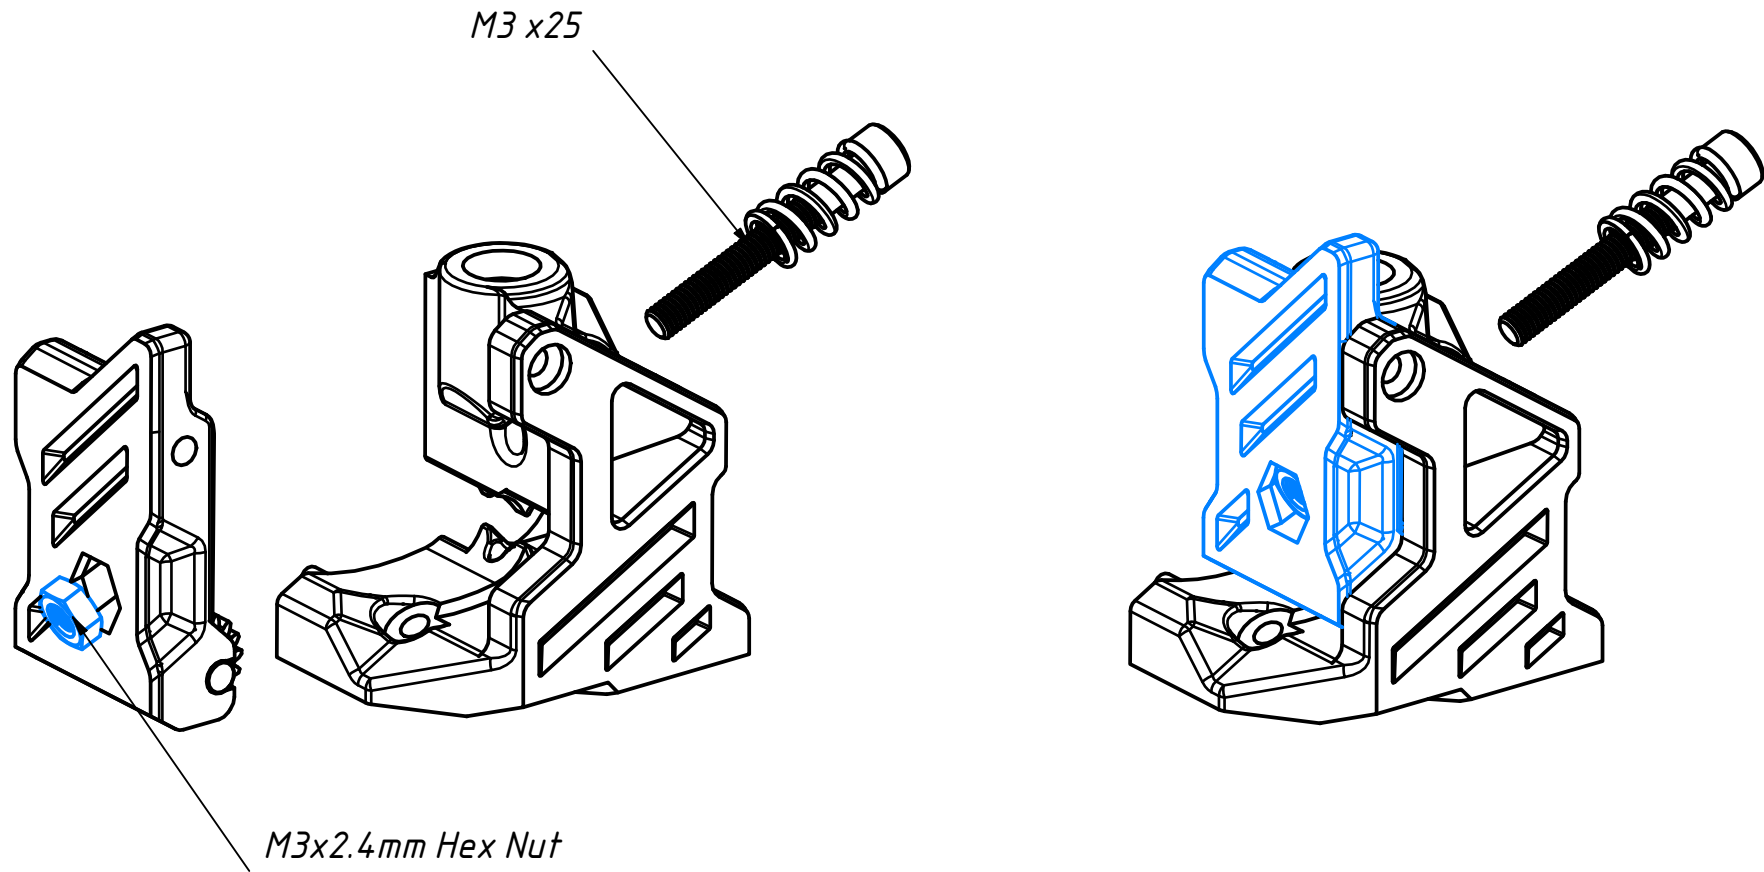

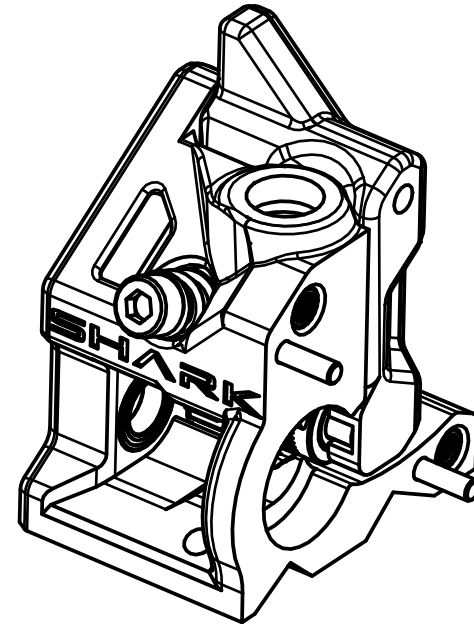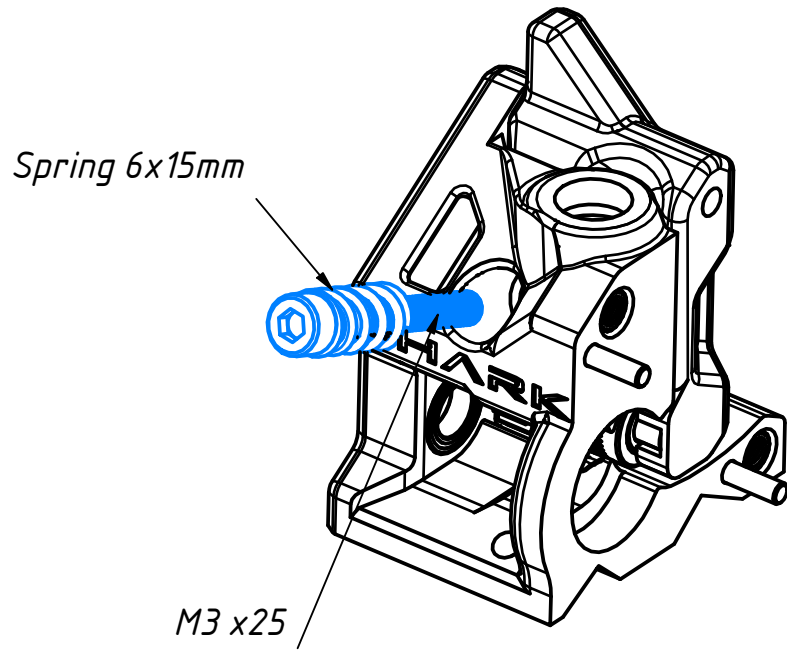


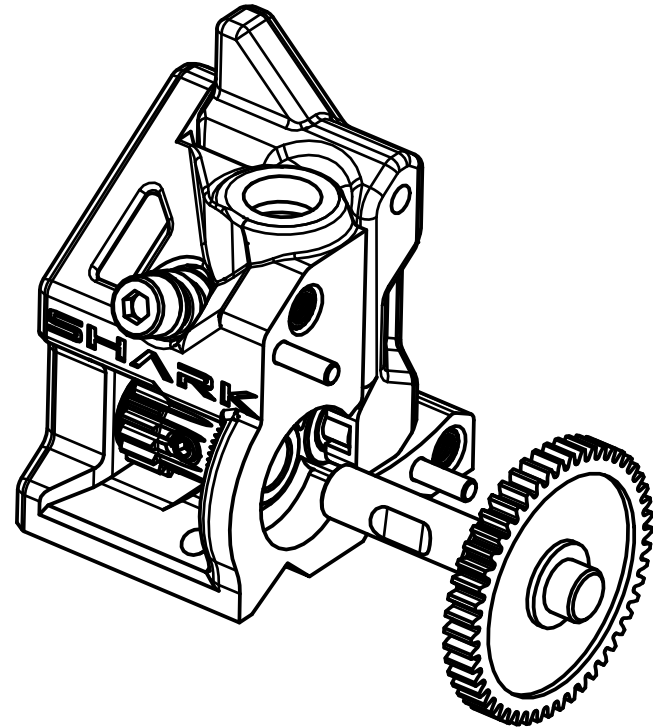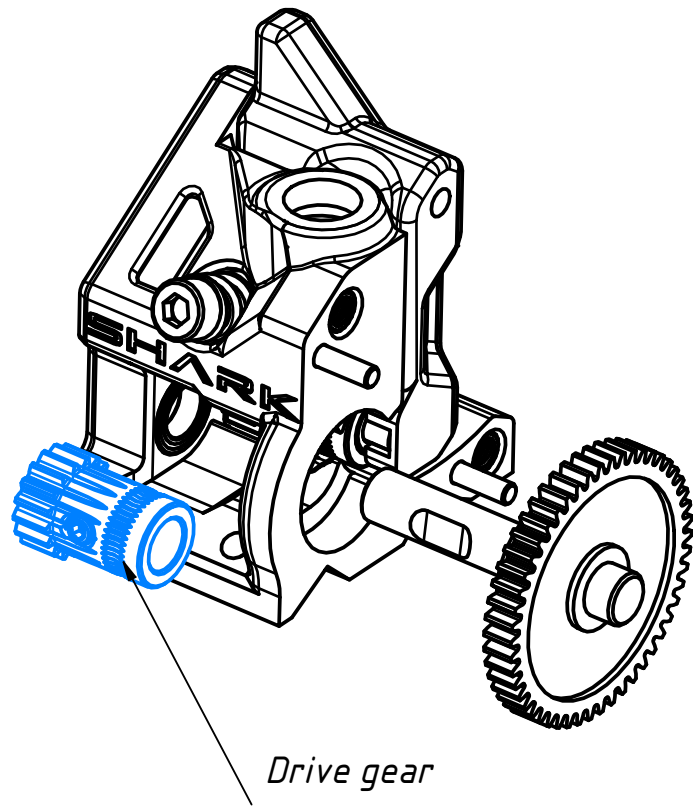

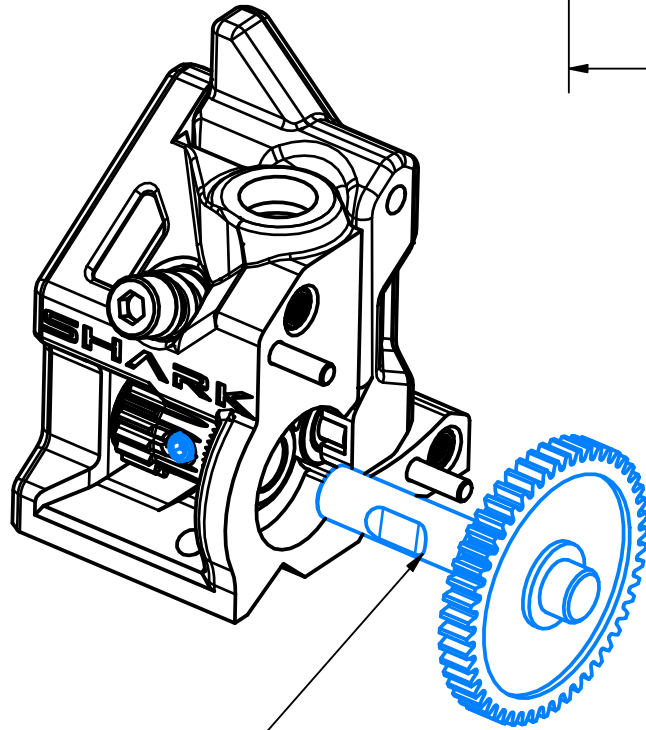
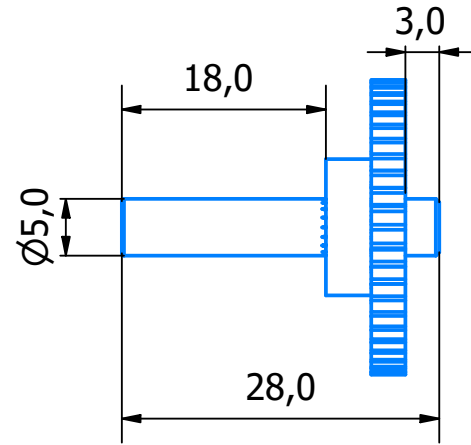


*DDB Extruder shaft*

Tighten after installation

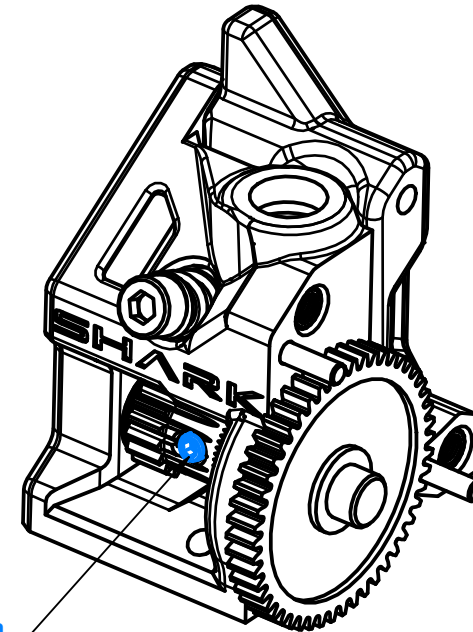



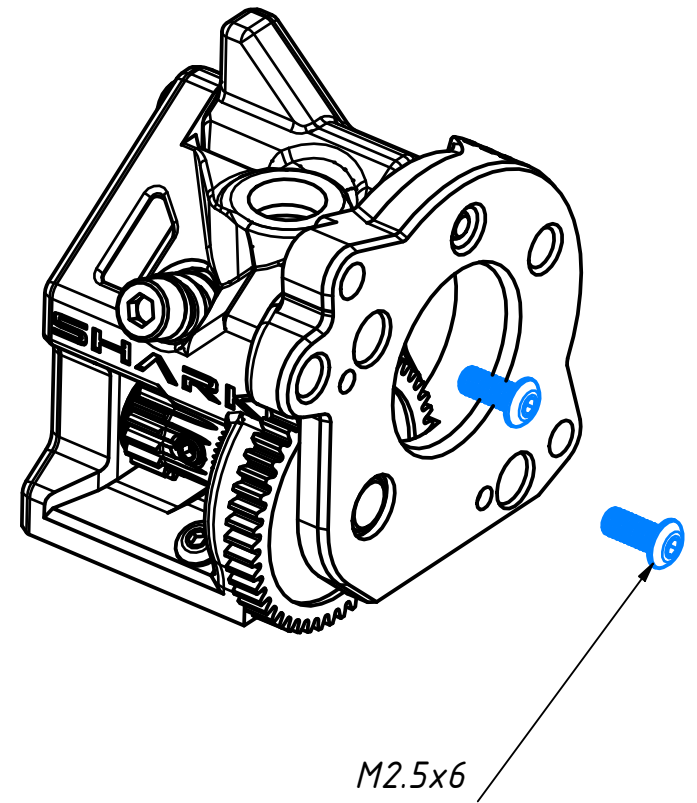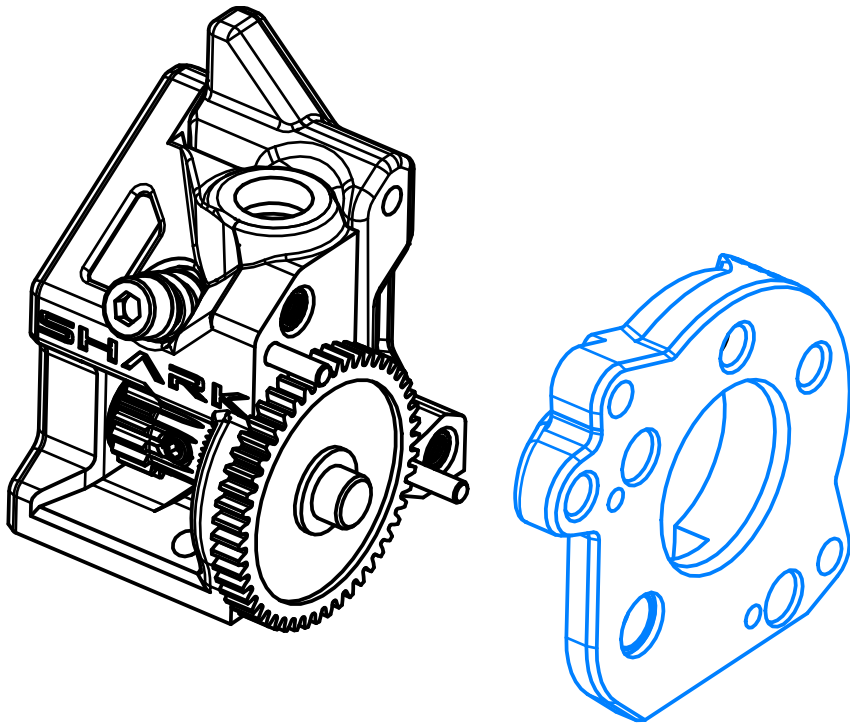

M2.5x6

